



Kapture Group, Inc

 
Sliding Back Adapter Instructions

The Kapture Group Sliding Back Adapter mounts directly to the rear standard of your view camera. Adapter boards are available for most 4x5 and 6x9 view cameras. A 4x5 Universal Graflok interface is also available instead of a view camera specific interface.

Attaching the digital back: The Sliding Back Adapter is designed to accept Hasselblad, Hasselblad H1 (see note), Mamiya 645AFD and Contax 645 digital backs. The digital back is mounted to the sliding back adapter via a camera specific drop-in insert illustrated below. The drop-in insert plate is designed to be attached either vertically or horizontally for portrait or landscape imaging. **To remove the drop-in insert** first pull on the spring loaded release lever in the direction of the white arrows as illustrated below. When attaching the drop-in insert to the sliding back **always** make sure it fits flush with the sliding back before allowing the release lever to re-engage. It is easier to attach your digital back to the drop-in insert and then insert the drop-in plate into the Sliding Back. **Please note: Do not use your digital back as a handle for sliding between framing and capture, use the sliding back itself.**

Please note: To remove a digital back from the **H1 drop-in insert** you **MUST** first remove the drop-in insert from the Sliding Back. The H1 release pin is located on the backside of the drop-in insert and is not accessible with the insert attached to the Sliding Back.

Spring loaded release lever for removing drop-in insert. To remove, pull in the direction of the white arrows.

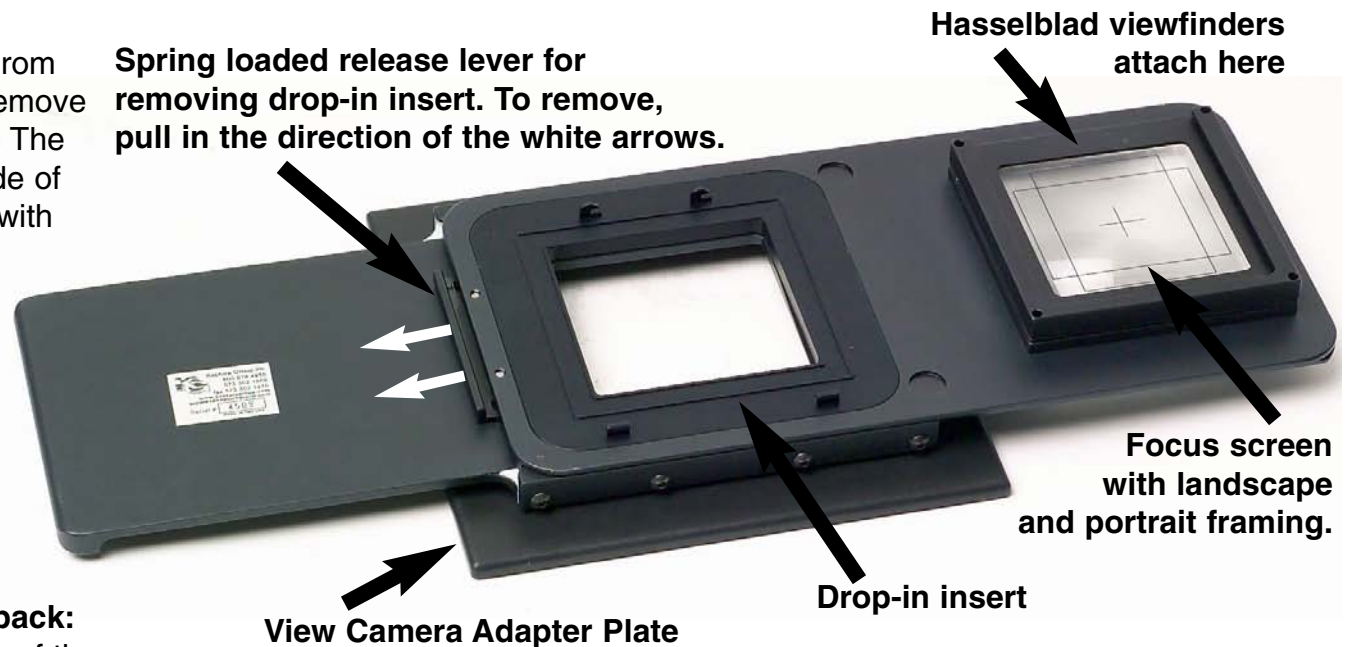

Attaching & removing an H1 digital back: Move the release lever on the rear side of the insert forward in the direction of the arrow above. You may find it easier to use an object such as a ball point pen.